


MOUNTING INSTRUCTION

FIGURE 1

- Mark the position of the universal brackets and fix them with silver colored screws as figure 1.
- Mount the cartridge to universal brackets,

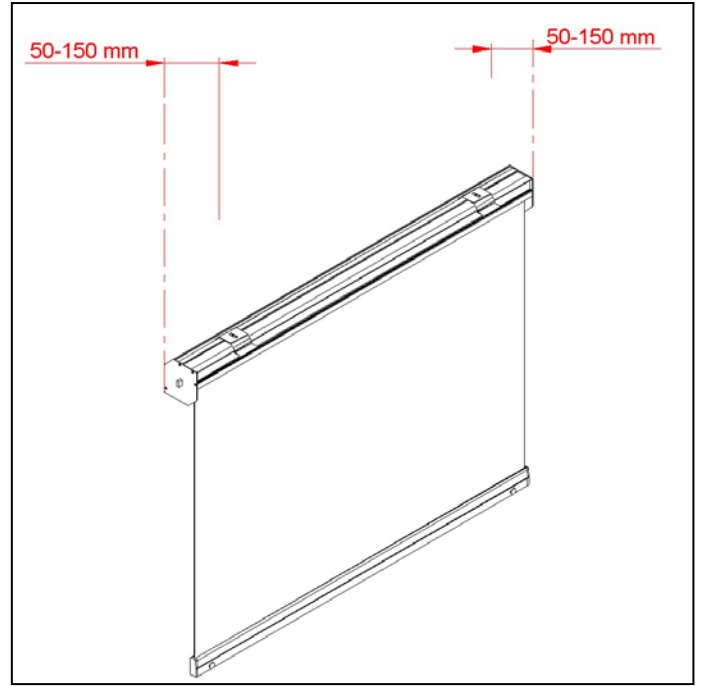

View from outside


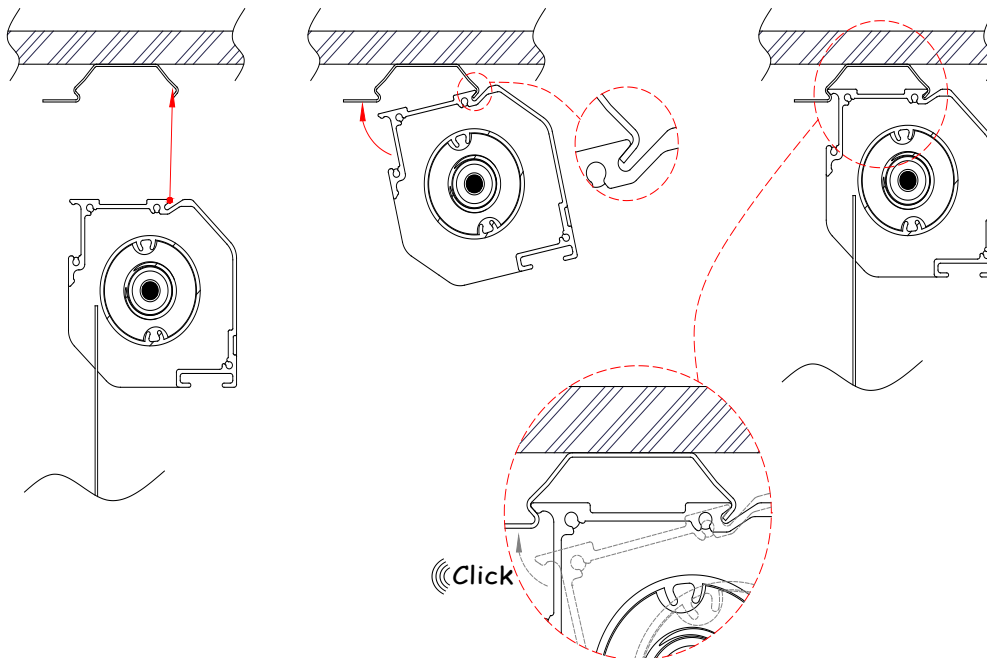


FIGURE 2


- Pass the rope through the bottom rail as per figure 2.

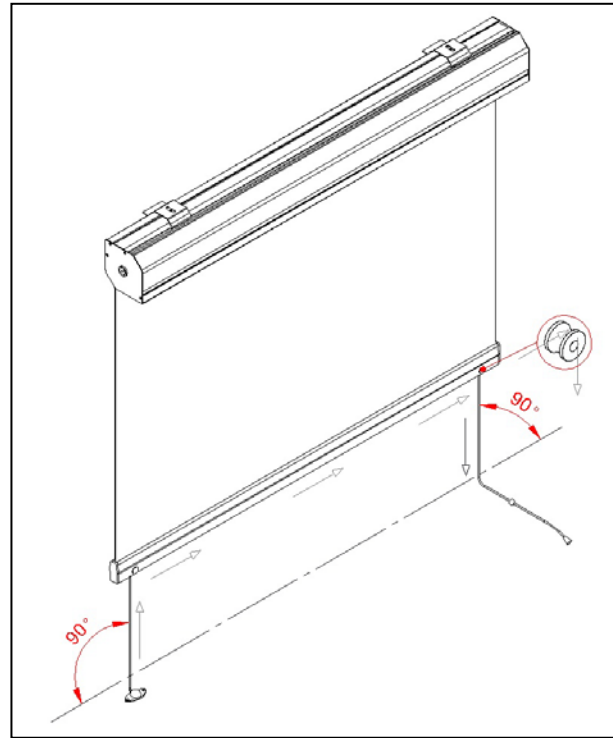

View from inside

FIGURE 3


- Pull down the film and mark the position of the rope fixing and the rope guide as per figure 2 and figure 3. Fix these with small screws (Picture 3),
- Fix the Clamcleat in position with black screws as per figure 3 (picture 4),

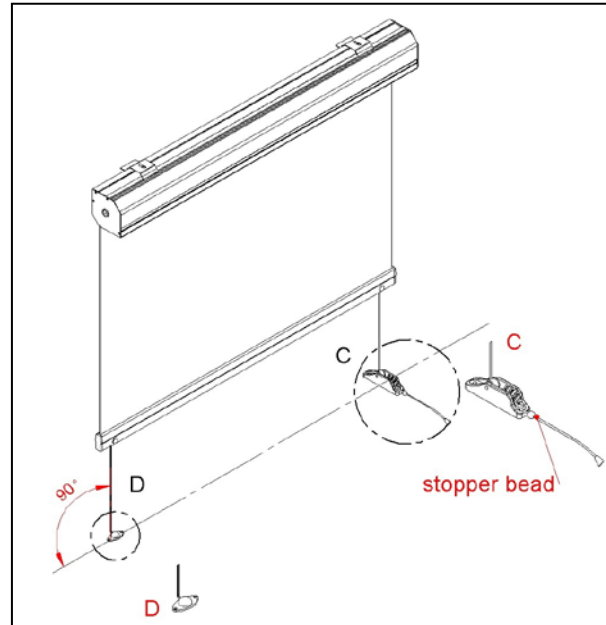

View from inside



PICTURE 2

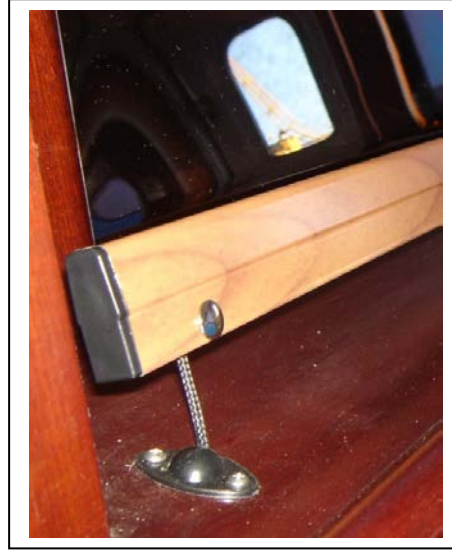


PICTURE 3



PICTURE 4

FIGURE 4

- Let the film roll up tight to the cartridge as per figure 4 (Picture 5),
 - Put the stopper bead on the rope as per figure 3(Picture 6),
 - Make a knot behind of the bead in this position as per picture 6,
-
- The bead will touch the rope guide when the film is upper position,

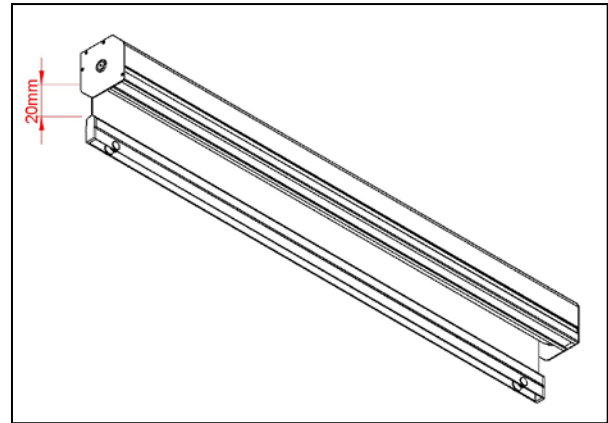

PICTURE 5



PICTURE 6